

954191



SCORPIO 430
ASSEMBLY INSTRUCTIONS

Serie 10.0-10.1


- Side. 3 Unloading
- Side. 4-5 Assembling the drawbar
- Side. 6-7 Assembling the wheels
- Side. 8-13 Assembling the rakes




UNLOADING

On export machine the towing eye is mounted on the front beam for easy loading and unloading of machines when the drawbar is not assembled.

Be careful when unloading to avoid damage on the main hydraulic block and hydraulic hoses.


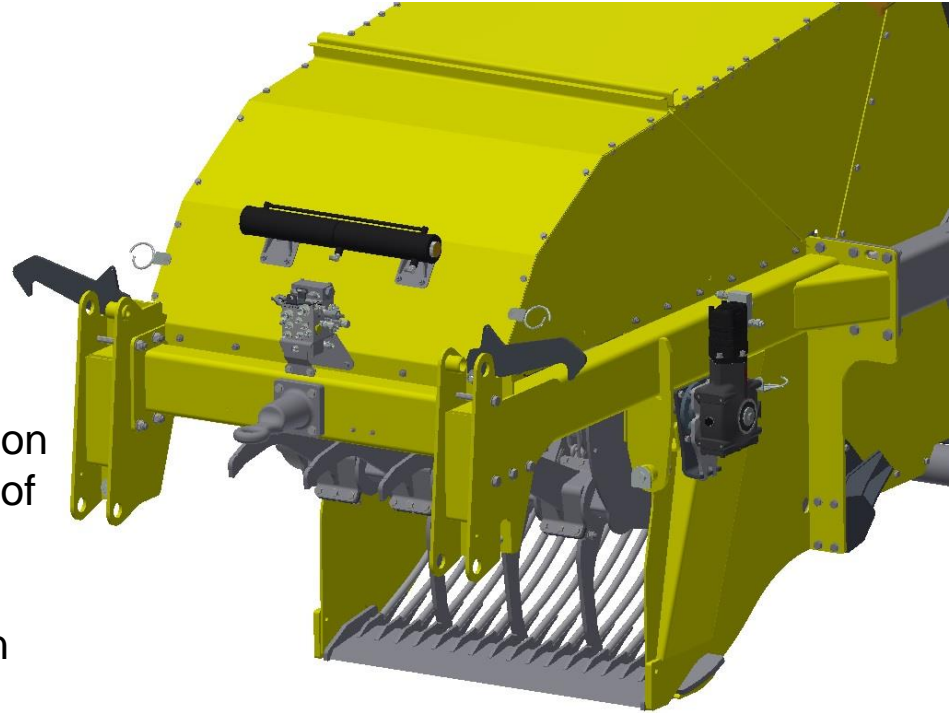


ASSEMBLING THE DRAWBAR

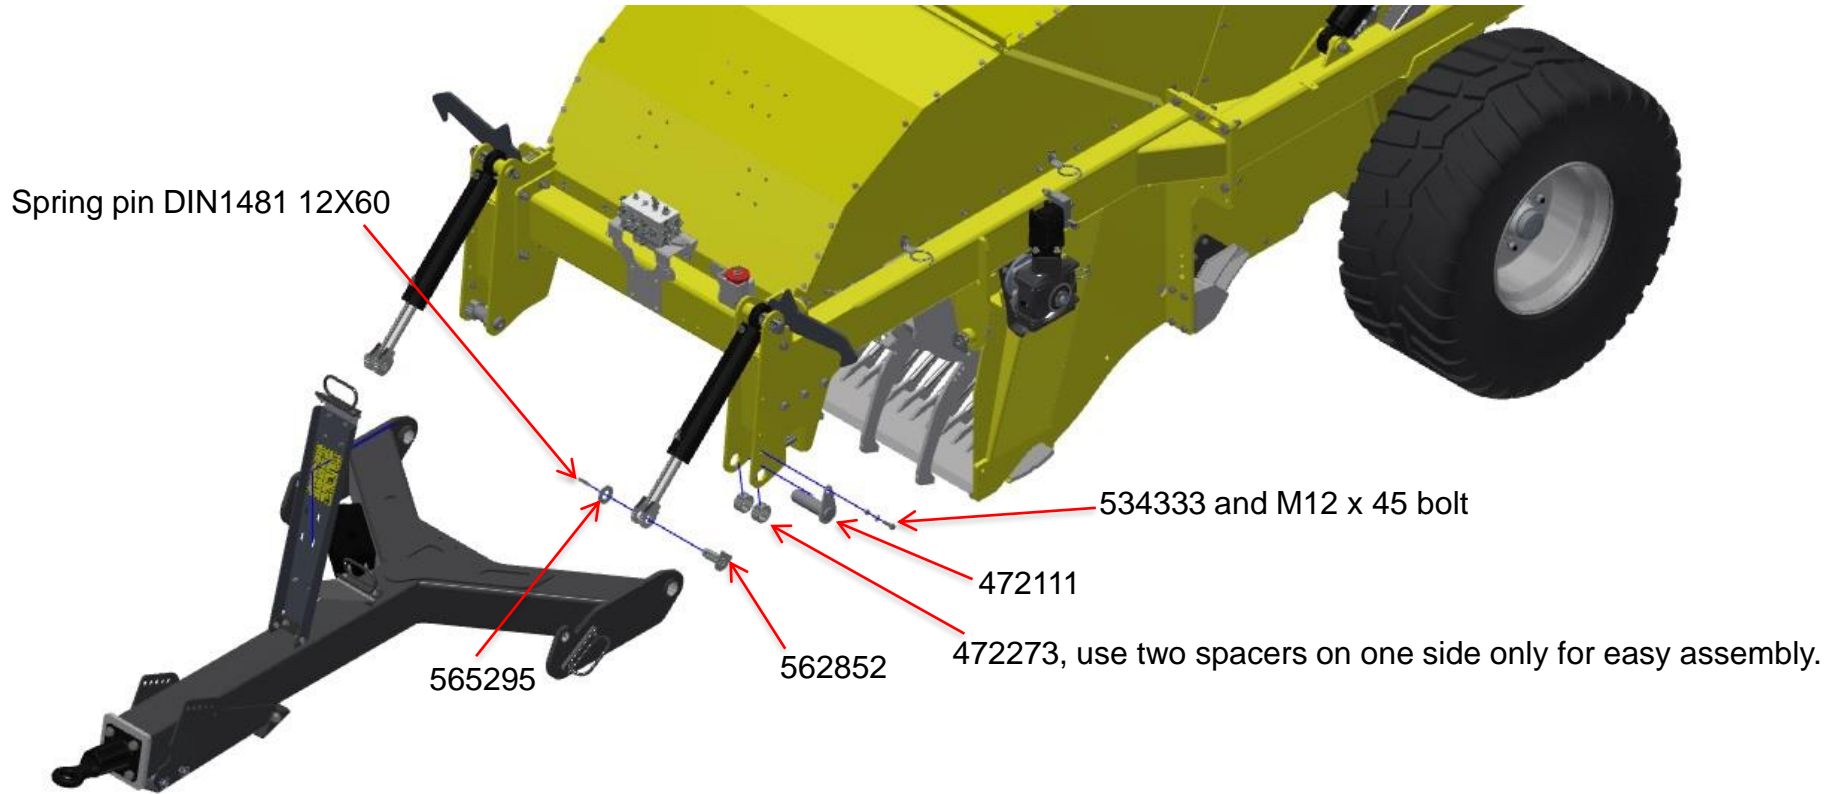

ASSEMBLING THE DRAWBAR


Remove the towing eye and attach it to the drawbar. Glue and tighten M20x80 bolts to 385 Nm.

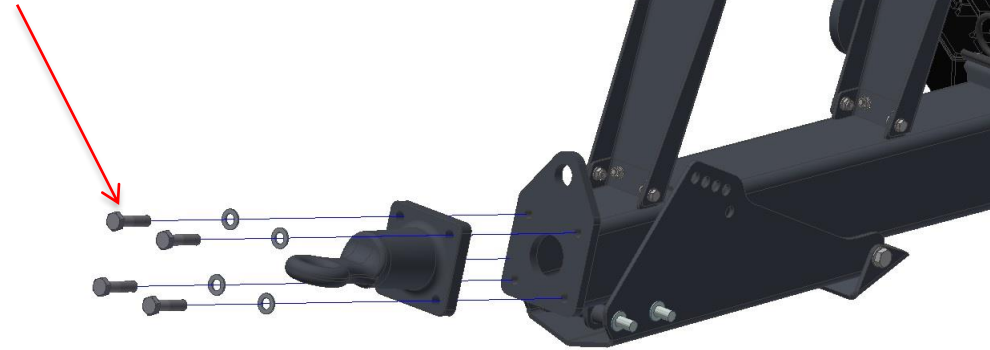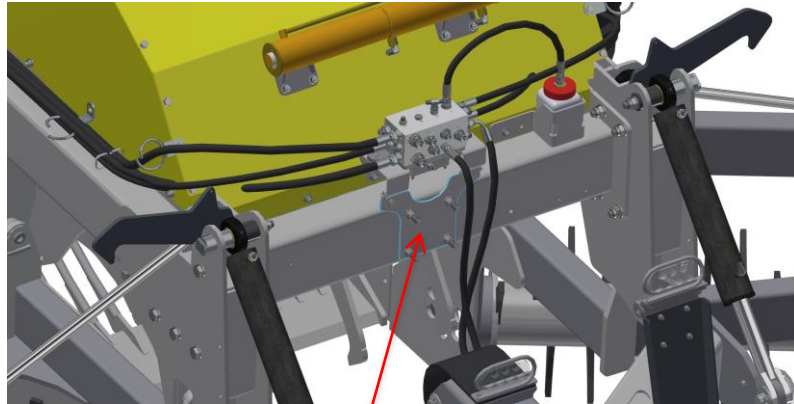

Attach the cover plate, part nr. 472665, with the supplied bolts and connect the bracket for the main hydraulic block.


ASSEMBLING THE WHEELS

Remove the transport wheel
by removing the 4xM24 bolts

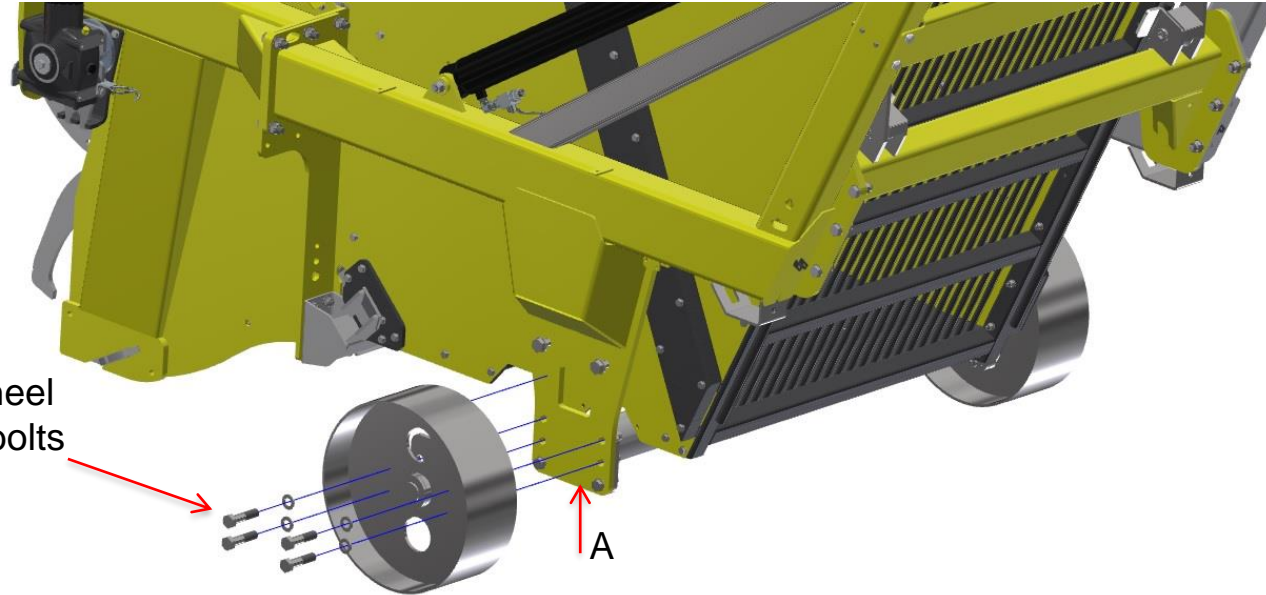


Take care when removing the transportation wheels and attaching the wheels. Make sure the machine is supported at point (A) before removing any parts. The distance between point A and the ground need to be **350- 400 mm** for easy installation of the wheels.

ASSEMBLING THE WHEELS

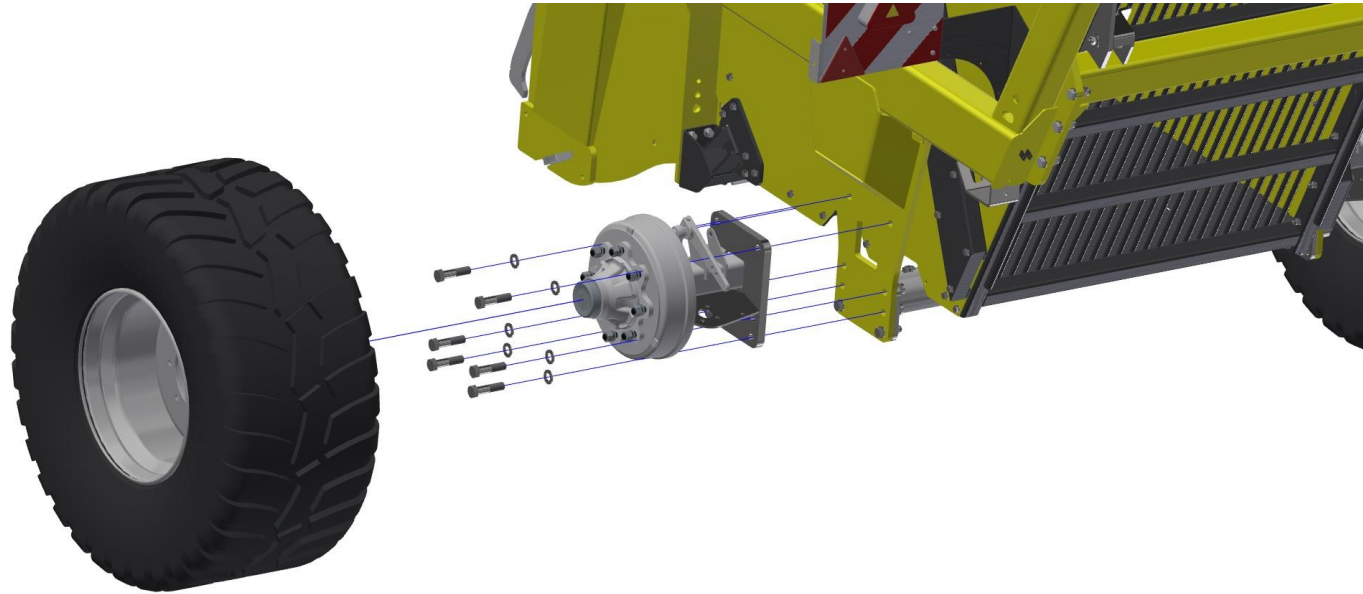


Attach the wheel axle using the 6xM24 bolts to 660 Nm.
Attach the wheels using the eight wheel nuts, tighten to 450 Nm.

ASSEMBLING THE RAKES

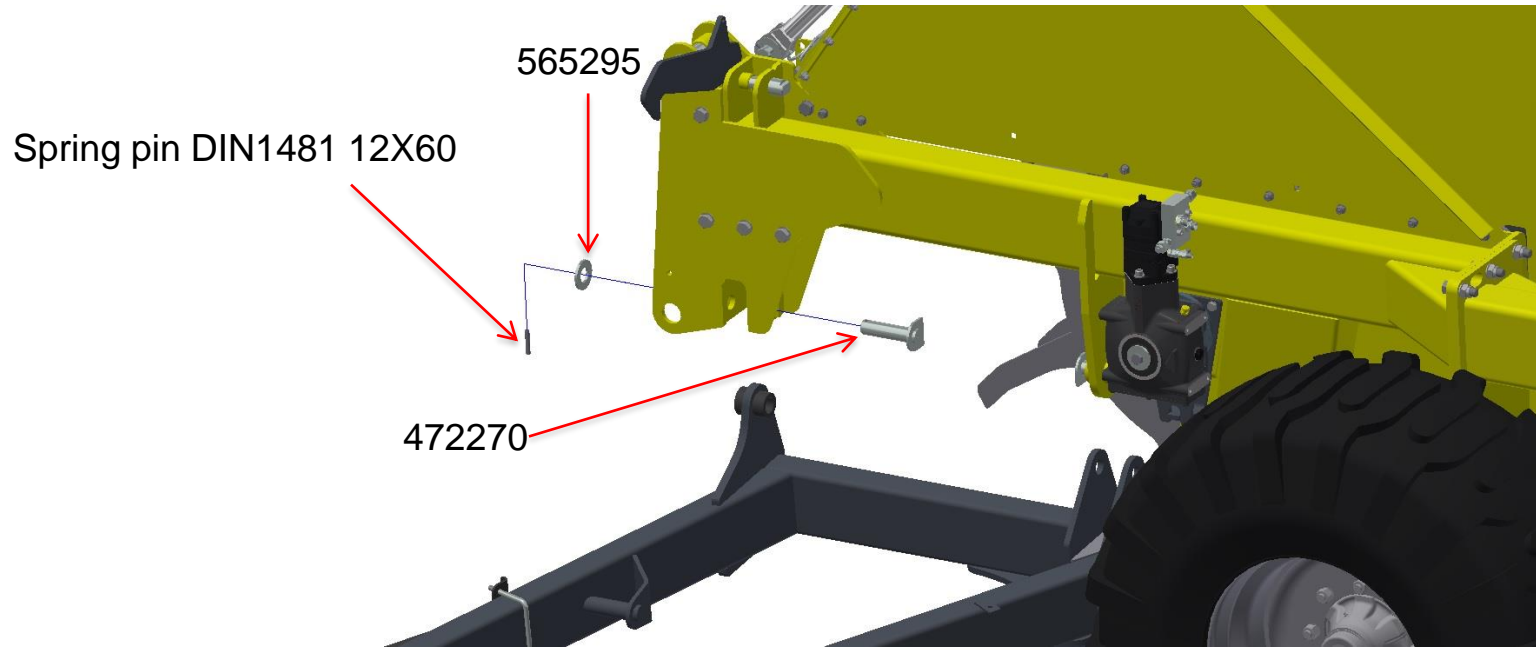


If the rakes are shipped on wooden pallets you can lift the rakes in place while they are still on the pallet. It is recommended to attach the drawbar before assembling the rakes so that you can lift the machine if needed.

ASSEMBLING THE RAKES

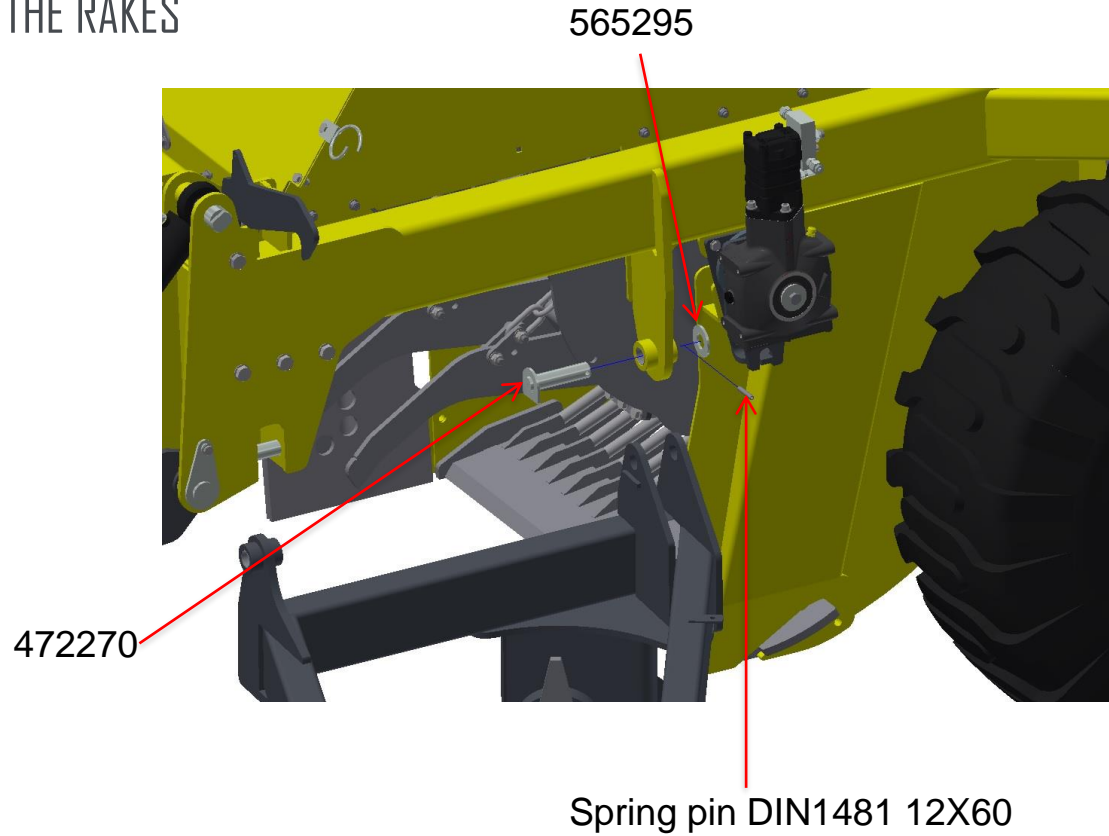


ASSEMBLING THE RAKES

M20 nut and washer

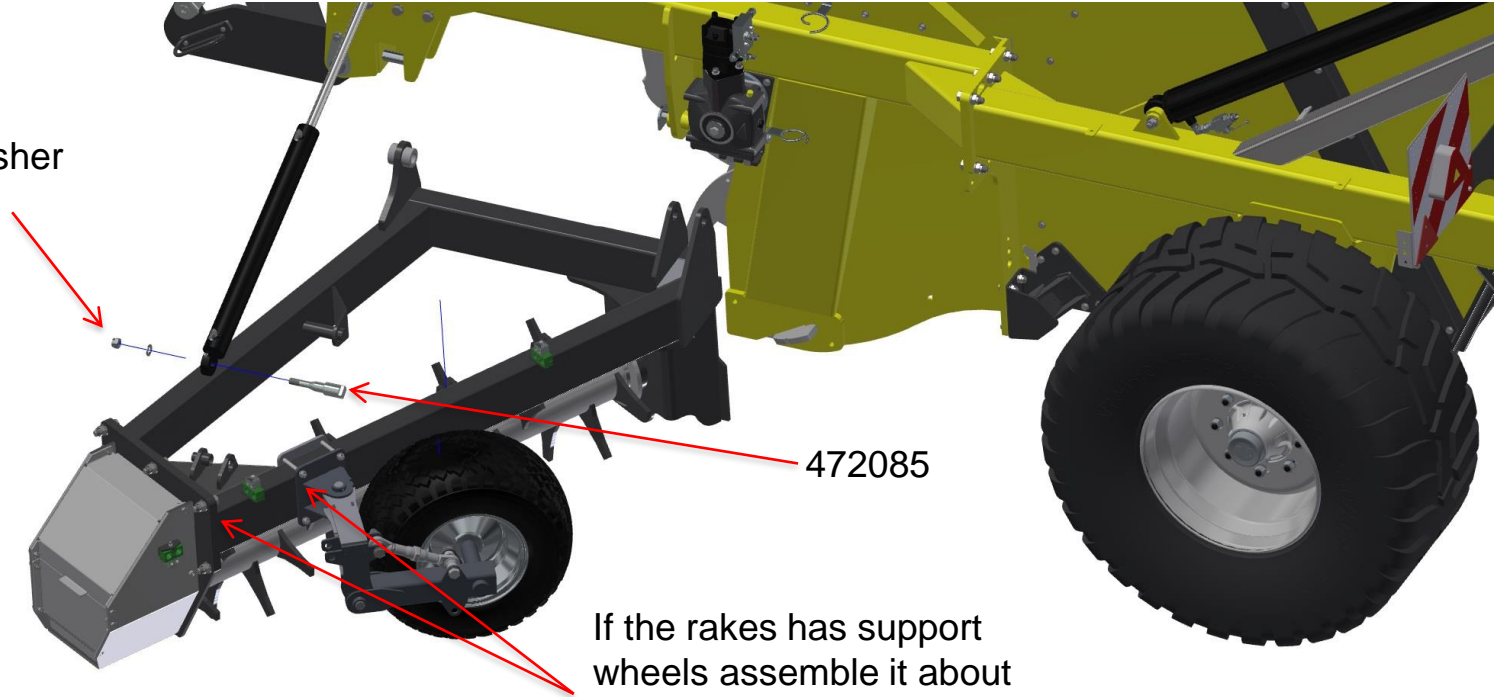


If the rakes has support wheels assemble it about 300 mm from the end plate.

ASSEMBLING THE RAKES

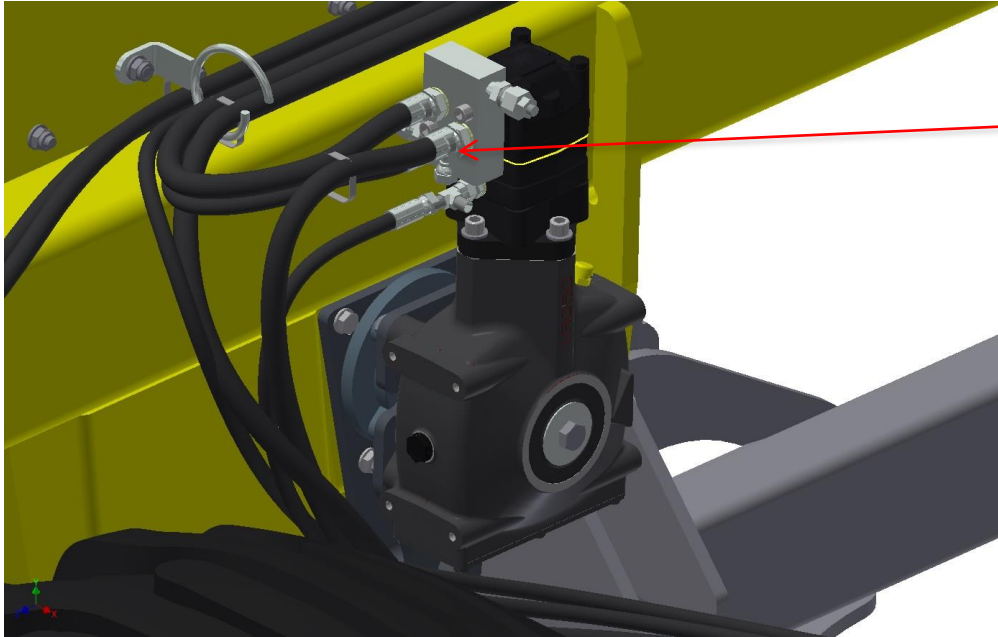

Connect the shorter hose (145743) from the rake motor to the outer port on the shockvalve for the main rotor motors.


ASSEMBLING THE RAKES

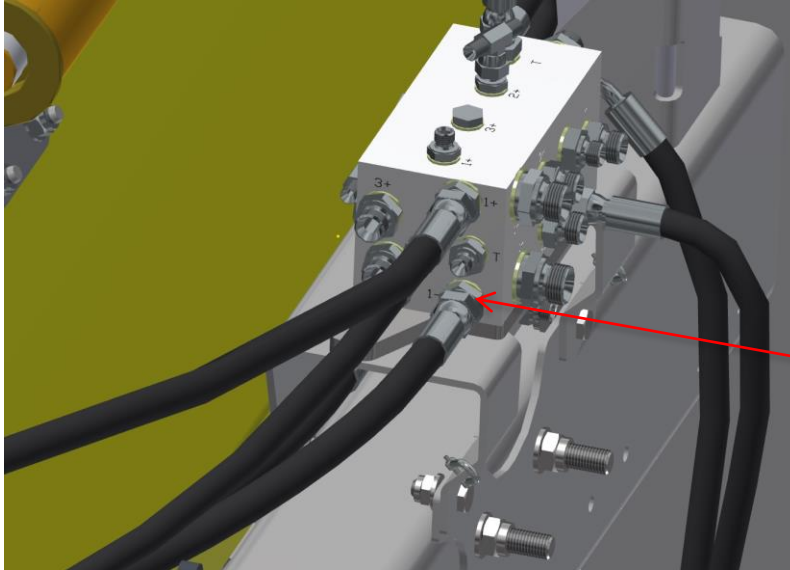

Connect the longer hose (145742) from the rake motors to the main block ports marked 1- for the right side rake and port 1- for the left side rake.



ASSEMBLING THE RAKES

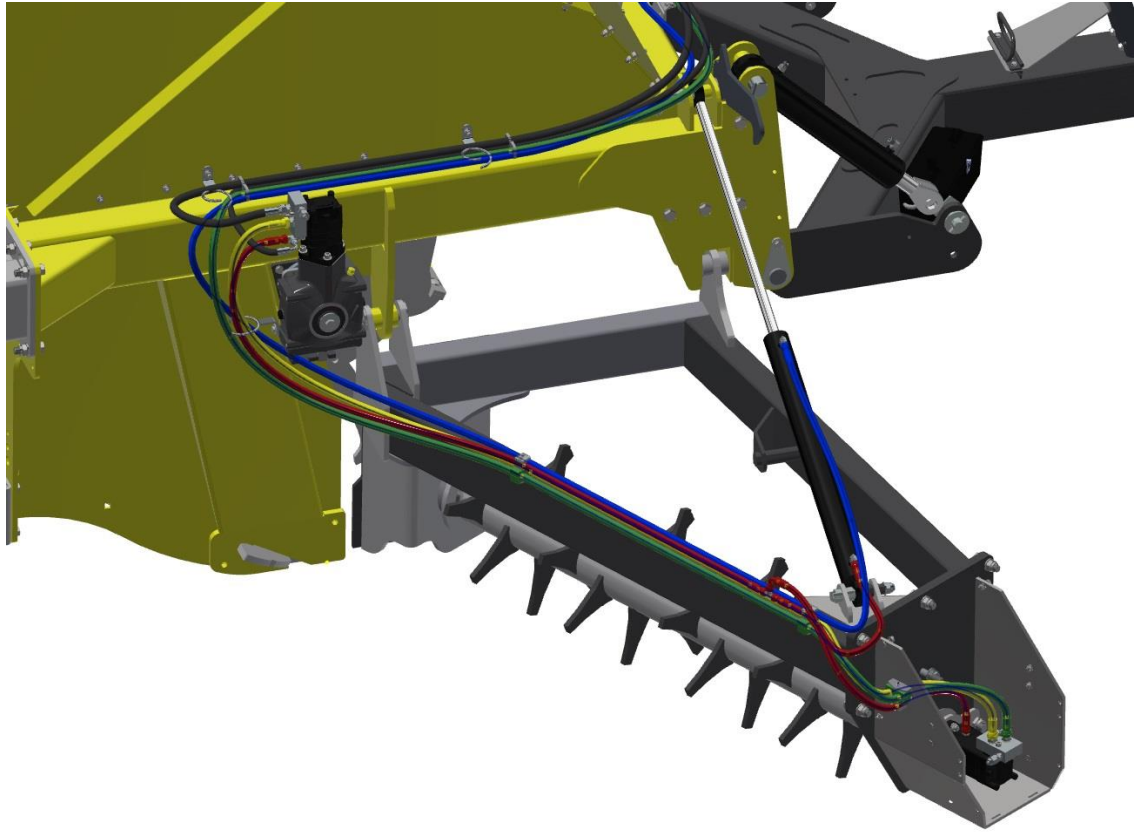

- Blue line connect to 50/50 divider under main block (4+)
- Red line connect motor drain lines
- Yellow line go from pickup rotor motor to rake motor
- Green line go from rake motor and connects to port 1- on mainblock.



